

# Western Illinois Chromebook Lending Grant

**Dr. Tahir M. Khan (he/him/his)** | Associate Professor

Interim Director of WIU Cybersecurity Center

School of Computer Sciences

Western Illinois University

309-298-1452; tm-khan@wiu.edu

### View of Chromebook 3110: Right



- 1.One USB 3.2 Gen 1 port with <a href="PowerShare">PowerShare</a>
- 2.One wedge-shaped lock slot

#### View of Chromebook 3110: Left


#### Left




- 1.LED status light
- 2. One USB 3.2 Gen 1 Type-C port with Power Delivery and DisplayPort Alt mode
- 3. One HDMI 1.4b port (optional)
- 4. One headset (headphone and microphone combo) port

## View of Chromebook 3110: Top


Top

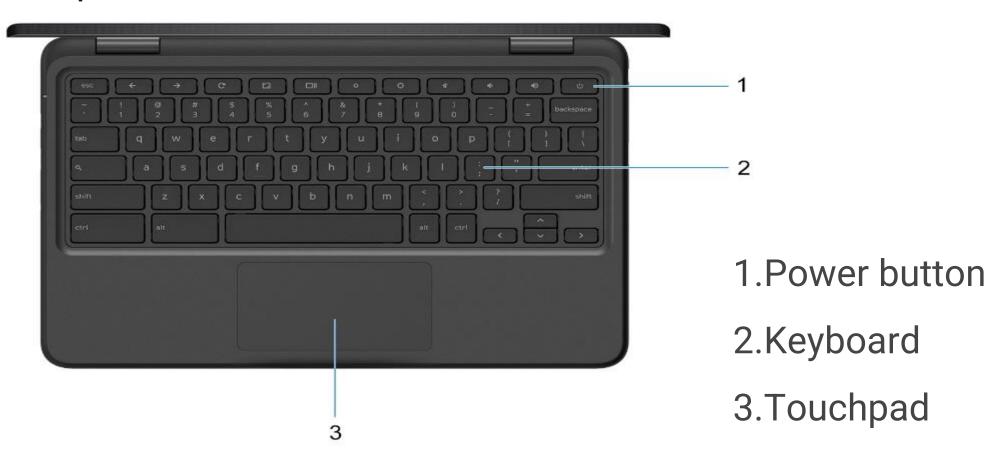

## View of Chromebook 3110: Display

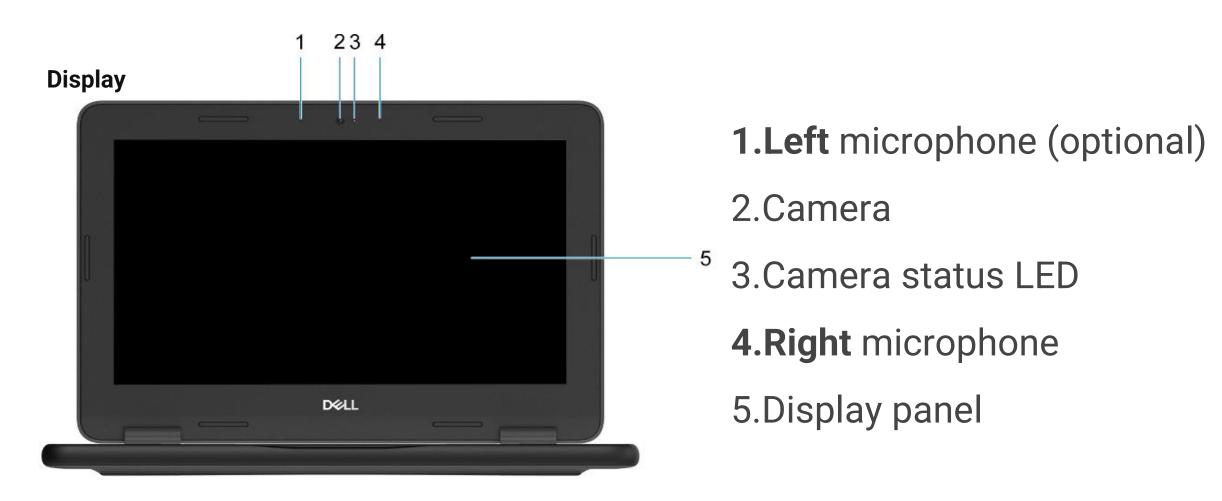

### View of Chromebook 3110: Bottom

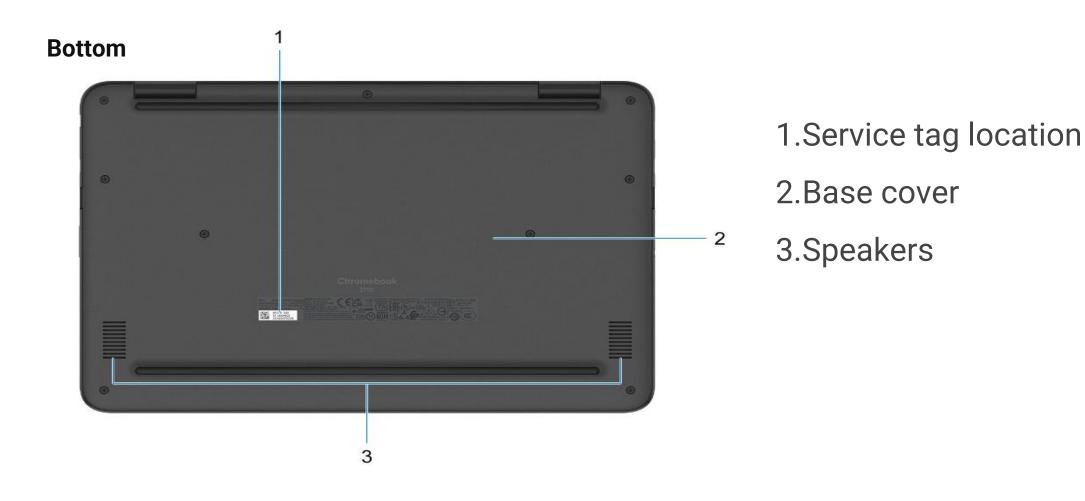

## View of Chromebook 3110: Bottom (Continue)



#### **Service Tag**


 The service tag is a unique alphanumeric identifier that allows Dell service technicians to identify the hardware components in your computer and access warranty information.

## **Keyboard Layout**



## **Keyboard Layout (Continue)**



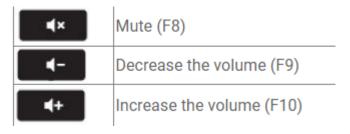


Search your apps and the web from your apps list. On a Chromebook, this key is on the side of the keyboard, where you would normally find the Caps Lock key.

To turn Caps Lock on temporarily, press Alt + the search key.

# **Quick Settings**


What Is Included In Quick Settings?

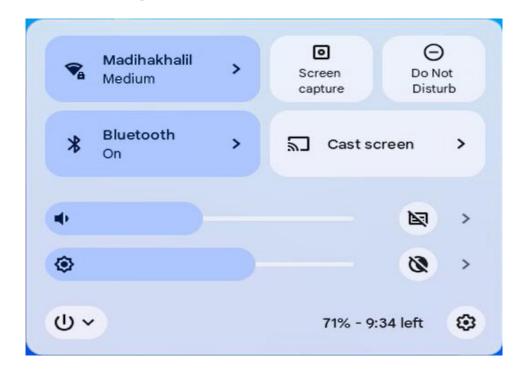

- Wifi
- Screen capture
- Do not disturb
  - all incoming notifications are muted
- Bluetooth
- Cast screen
  - casting content to a TV or other device
- Audio and Display Settings

Click on the battery icon (located in the bottom right of the screen)

# Quick Settings (Continue)

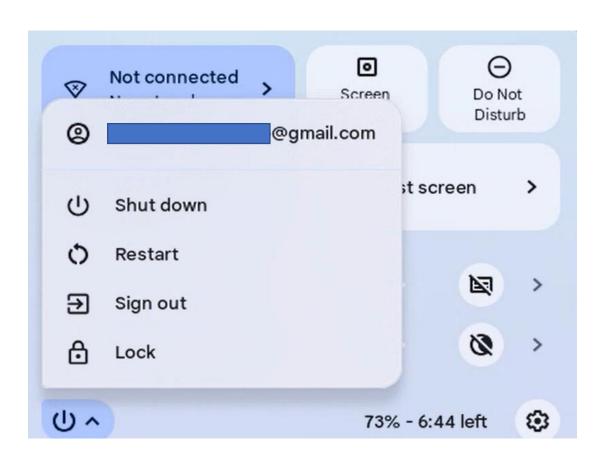


- Power off button
  - Shut down
  - Restart
  - Sign out
  - Lock
- Settings


#### How to Connect to Wi-Fi

• Step 1: Click on the Quick Settings Panel at the bottom right of your

screen.


• Step 2: Click on "no-network."

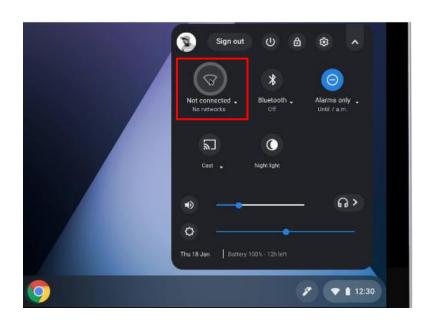


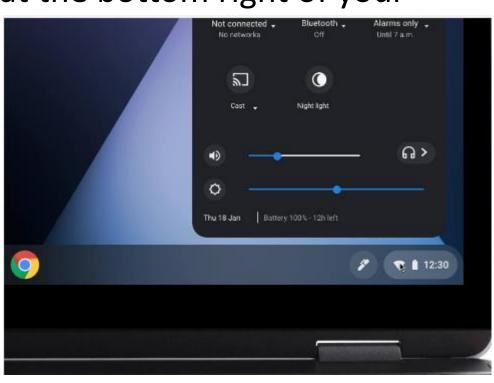

## How to Connect to Wi-Fi (Continue)

- Step 3: Select your Wifi Network.
- Step 4: Pick one and enter the password if it calls for one.

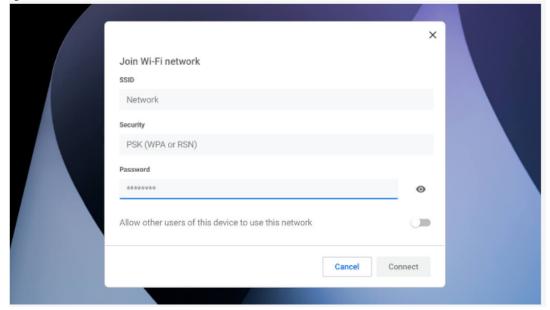

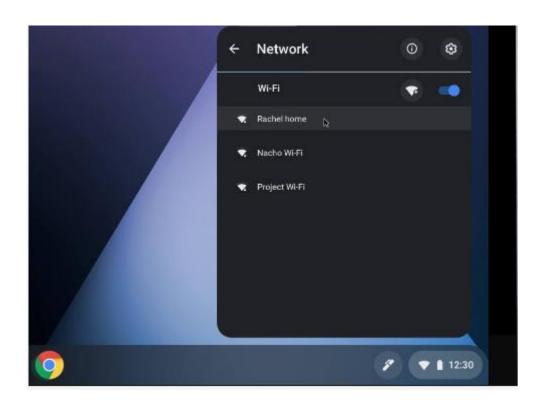

#### How to Connect to Bluetooth

• Step 1: Make sure the Bluetooth device you want to connect is on nearby and ready to pair.


• Step 2: Click on the Quick Settings Panel at the bottom right of your

screen.

Step 3: Click Bluetooth.


• Step 4: Select your Bluetooth accessory.

• Step 5: Follow any additional instructions on

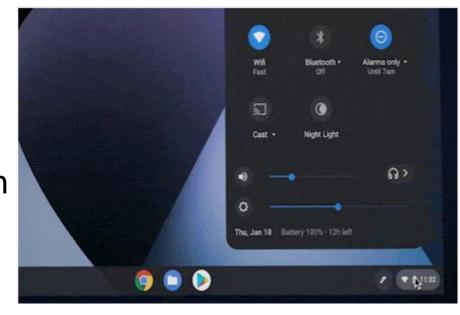


# Settings


Click on Settings

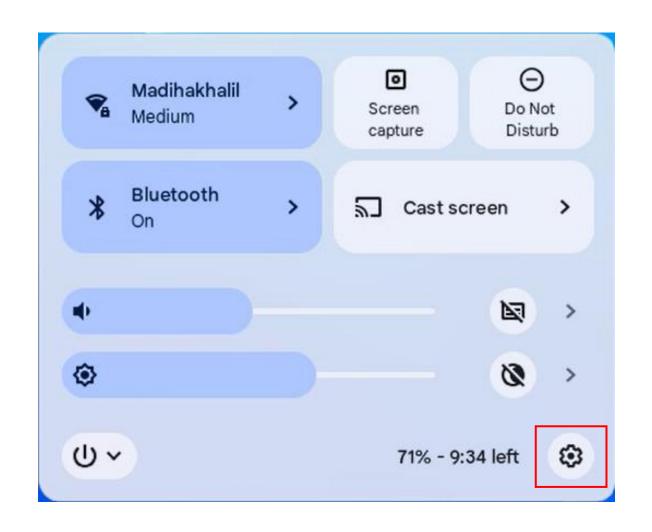


## **Network Settings**

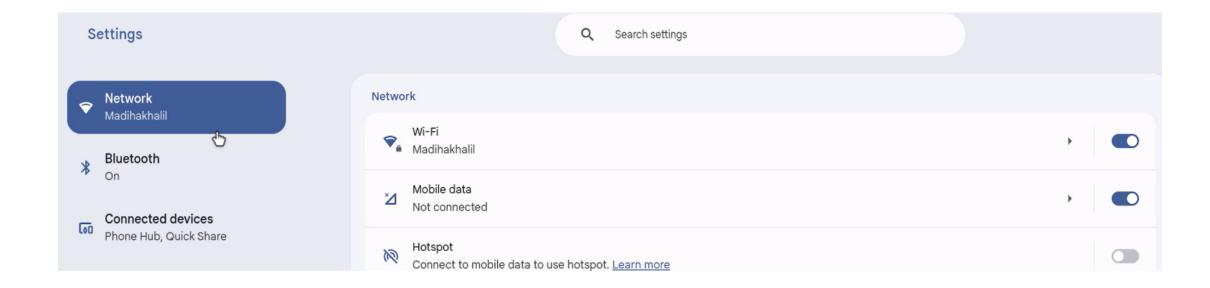


#### **Bluetooth and Connected Devices**

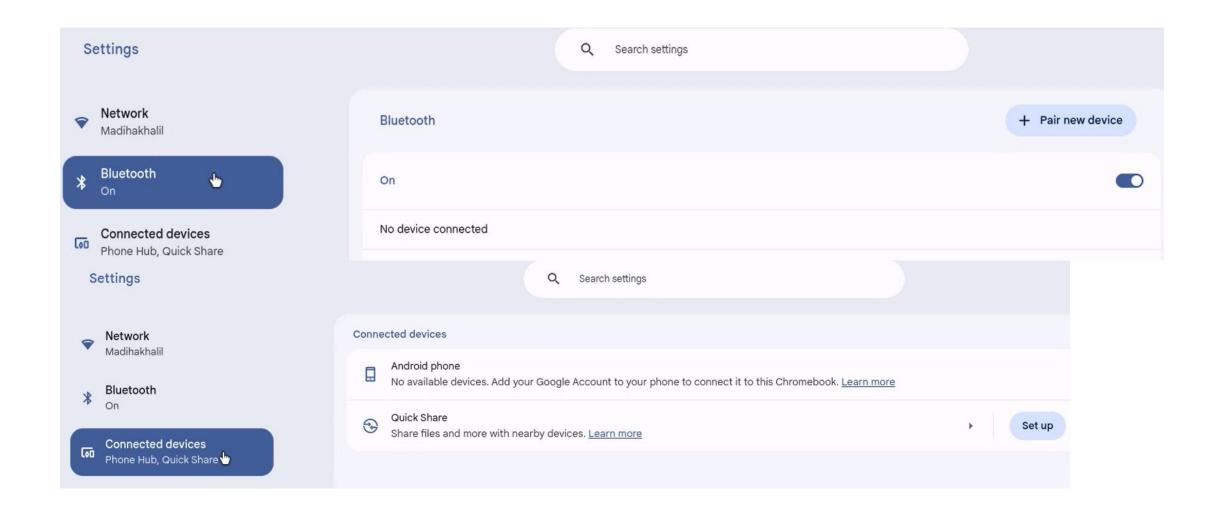


## **ChromeOS Version and System Updates**

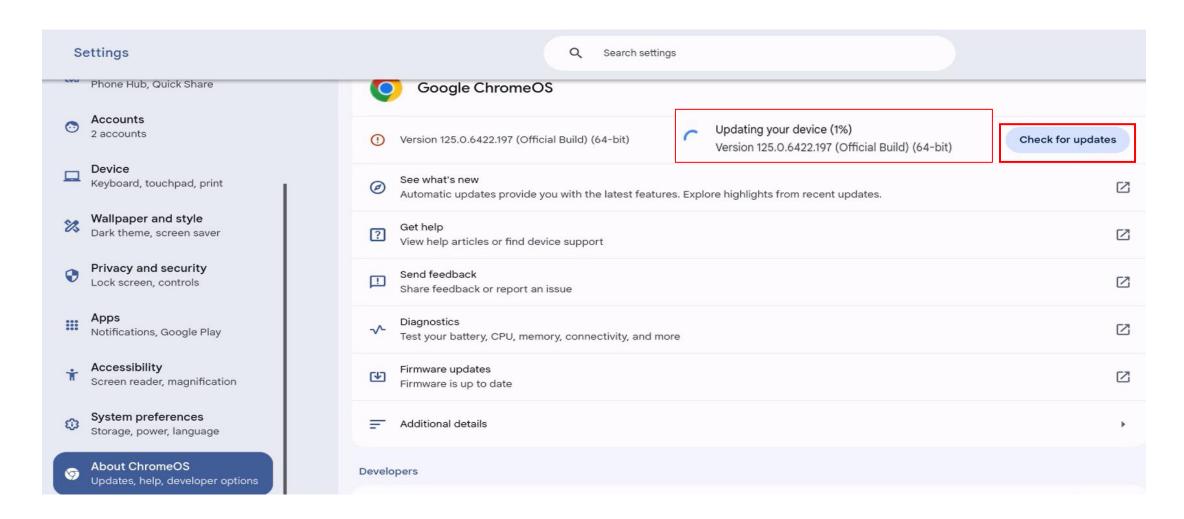

## System Preferences

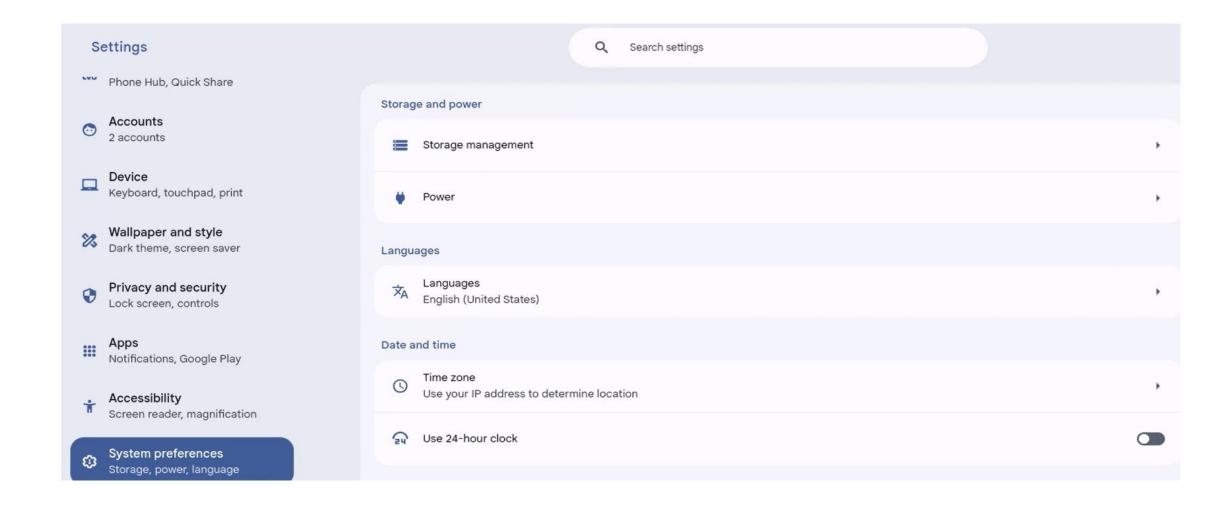

## **Accessibility Settings**

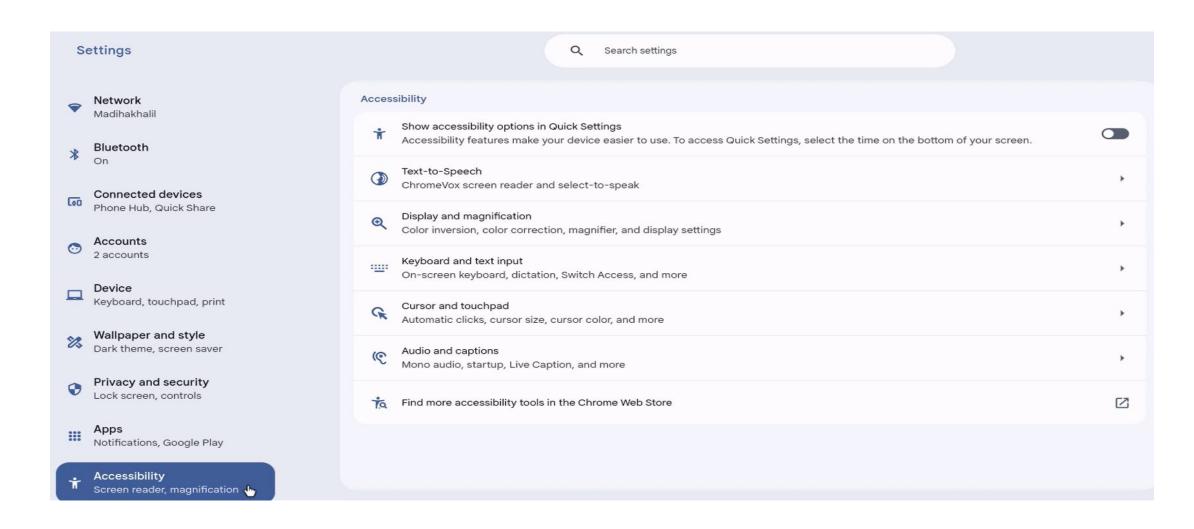


## How to search anything on a Chromebook

Step 1: Press Search and the search bar will appear.


Step 2:

Now you can **search** files, apps, and the web.

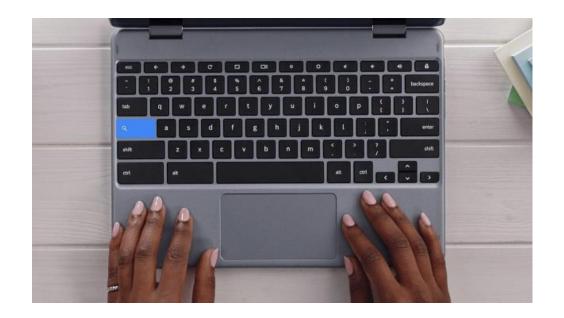


### **Download Apps**

- Step 1: Open the Play Store from the Launcher ().
- Step 2: Browse apps by category there, or use the search box to find a specific app for your Chromebook.
- Step 3: After you've found an app, press the **Install** button on the app page.

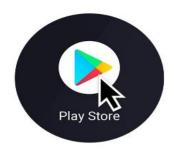



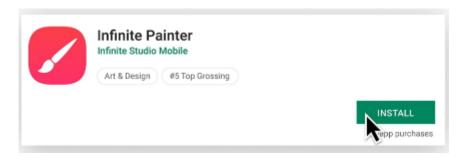

## Download Apps (Continue)


• Step 4: The app will download and install to your Chromebook automatically.

• It will now appear in the Launcher.



#### Transfer Files


- Step 1: On your PC or Mac go to google.com/drive.
- Step 2: Log in with the same account you use on your Chromebook.
- Step 3: Click on the "New" button.

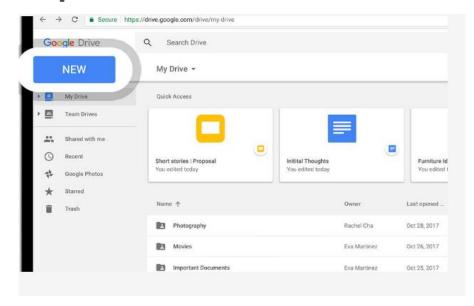



## Transfer Files (Continue)

- Step 4: Then, select a format, like "Folder upload."
- Step 5: Select all the files you want to upload.
- Step 6: Now log in to the same account on your Chromebook and all those files will be waiting for you.

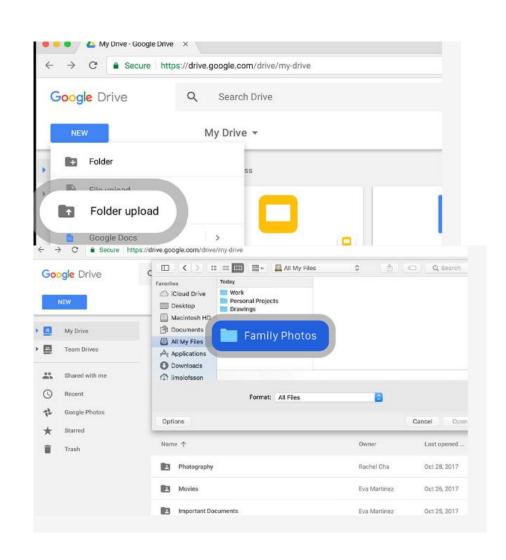

## Find and open a file

- Step 1: In the corner of your screen, select the Launcher o.
- Open Files •.
- On the left, choose where your file is saved.
  - 1. For files you've just used, select **Recent**.
  - 2. For a list of recent files by type, use the button to select that file type.

#### Delete a file

- In the corner of your screen, select the Launcher o.
- Open Files •.
- Select the file or folder you want to delete.
- Select Trash •
- Important: Most files are sent directly to Trash. For files that aren't sent to Trash, you must confirm that you want to permanently delete them.

## Pin files to your shelf

- In the corner of your screen, select the Launcher o.
- Open Files •.
- On the left, select the folder that contains the file you want to pin.
- Right-click the file.
- Select Pin to shelf.
- To unpin files, right-click the file.
  - Select Unpin from shelf.

## Pin files to your shelf (Continue)

- Find a pinned file:
  - 1.At the bottom right, select the **shelf container**.
  - 2. Right-click your file.
  - 3. Select **Show in folder.**

#### Open & edit Office files on your Chromebook


- On your Chromebook, you can open, edit, download, and save Microsoft® 365 files, such as Word, PowerPoint, or Excel files.
- Option 1: Use the Microsoft 365 app
- You can open Microsoft files stored on your Chromebook with the Microsoft 365 app, which contains Word, Powerpoint, and Excel.
- Option 2: Use Google Docs, Sheets, or Slides
- With **no setup needed**, Google apps on your computer can also open Microsoft 365 files.

#### Option 1: Use the Microsoft 365 app

- To set up Microsoft 365 on your computer:
- In the corner of your screen, select the Launcher .
- Find and select **Explore**.
- Navigate to "Microsoft 365".

### Option 1: Use the Microsoft 365 app (Conti..)

- Select Set up.
- Follow the on-screen instructions and connect the Files app to Microsoft OneDrive.
- OneDrive is required to open and edit files in Microsoft 365.

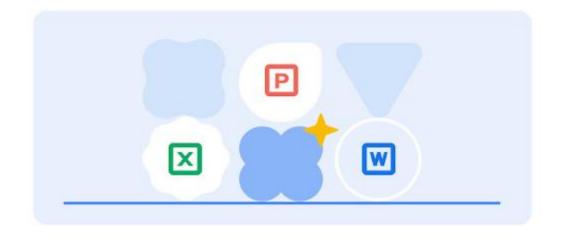

#### Set up Microsoft 365 for your Chromebook

#### How it works:

- 1. Install Microsoft 365
- 2. Connect to Microsoft OneDrive
- 3. Files will move to OneDrive when opening in Microsoft 365

A subscription may be required. View Microsoft terms and conditions.



### Option 1: Use the Microsoft 365 app (Conti..)

#### After you're set up:

 
- Microsoft 365 app is added to **your Launcher**.
- Microsoft OneDrive appears in the Files app.
- Your file opens.


#### Add a New User Account

• Step 1: Start on the login screen.

• Step 2: Instead of logging in with your profile, click "add person" at


the bottom of the screen.



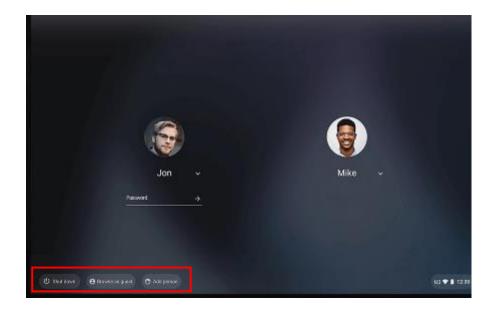

#### Add a New User Account

• Step 3: Then you can log in with any Google Account.

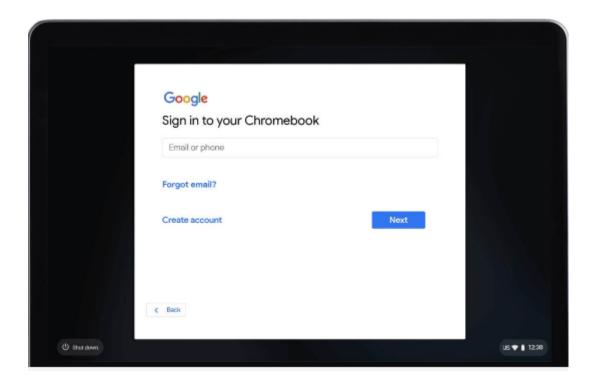


#### Browse as a Guest

• Step 1: Instead of logging in with your profile, click Browse as Guest at the bottom of the screen.



Step 2: Now you'll be able to use the Chromebook in Guest mode. You won't see any of the files saved in the other user accounts.

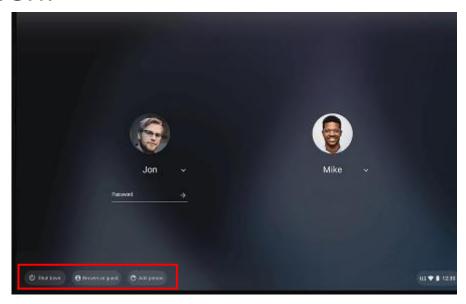

**Step 3:** When you're done, **log out**. Your history or files won't be saved.

## Set up ChromeOS

Are you Setting up ChromeOS for the first time?

• Set Up ChromeOS | Dell US


#### How can we help you?

# Getting Help



- ChromeOS Support
  - https://support.google.com/ /chromebook#topic=33997
    64
  - https://www.dell.com/supp ort/contents/enus/category/productsupport/self-supportknowledgebase/operatingsystems/chromeos

#### Browse help topics

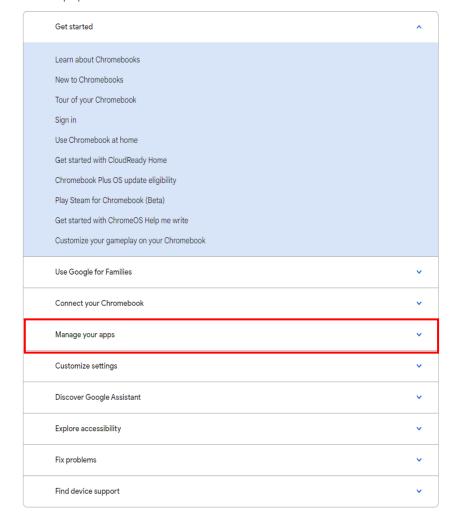

#### Chromebook Best Practices for Care and Use

- Always keep the Chromebook in a protective (if offered or provided).
  - For the highest level of protection, consider purchasing a protective Chromebook case.
- Keep the Chromebook dry, protected from rain, snow, and any other liquids.
- Take caution with food or drinks around the device.
- Do not lean on top of the Chromebook or place anything near the Chromebook that could put pressure on the screen
- Cords, cables, and removable storage devices must be inserted carefully into the Chromebook.

#### Chromebook Best Practices for Care and Use (Continue)

- Avoid touching the LCD screen with sharp or pointed objects (Example: Pencils, pens, and so forth).
- Do not leave your Chromebook in a car or any location that can expose the Chromebook to extreme temperature or direct sunlight for extended periods of time.
- Chromebooks should be shut down when not in use to conserve battery life.
- Close the Chromebook carefully from the top center of the LCD screen (do not slam it shut).

#### Chromebook Best Practices for Care and Use (Continue)

- Do not stack Chromebooks or other laptops when storing them or under other items that could put pressure on the Chromebooks.
- Do not place anything on the keyboard before closing the lid, such as pens, pencils, spiral notebooks, or as storage for loose papers.
- Do not rotate or open the LCD screen beyond its design limit.
- It is best not to place your Chromebook on uneven surfaces where it might accidentally fall.

#### Chromebook Best Practices for Care and Use (Continue)

- Do not pick up your Chromebook by the LCD screen.
- Avoid placing too many items around the Chromebook during transporting (laptop bag or backpack).
- Stuffing the Chromebook in your backpack with too many books around it could damage the LCD screen.

## Clean your Chromebook often.

- Shut down your Chromebook before cleaning.
- LCD Screen Cleaning:
- Gently wipe the LCD with a clean soft or microfiber cloth. Do not use window cleaner or any type of household cleaner on the LCD. Use a cleaner specially designed for an LCD.
- Keyboard and Chassis Cleaning:
- Wipe surfaces lightly with a clean soft or microfiber cloth.

#### **Thank You!**

Dr. Tahir M. Khan (he/him/his) | Associate Professor

Interim Director of WIU Cybersecurity Center

tm-khan@wiu.edu

**Questions?** 

